



**IMPORTANT SAFEGUARDS**

**DO NOT PUT WATER IN OUTER  
PAN!!!!**

**TO PROTECT AGAINST ELECTRICAL HAZARDS DO NOT  
IMMERSE ROASTER, CORD, OR PLUG IN WATER OR  
OTHER LIQUID.**

**UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE  
CLEANING.**

**ALLOW TO COOL BEFORE CLEANING.**

**DO NOT OPERATE OTHER APPLIANCES ON THE SAME  
ELECTRICAL CIRCUIT WHILE ROASTER IS BEING USED.**